



LISTE DES APPAREILS COMPATIBLES AVEC LES 7 ADAPTATEURS FOURNIS AVEC LE CHARGEUR SOLAIRE EAGLE AVEC LAMPE TORCHE 3 LED INTEGREE



Samsung®

SCH : A310, A530, A570, A610, A630, A650, A670, A790, A890, A920, N330 **SGH** : A300, A308, A400, A800, C100, C110, C200, C207, C225, D307, D357, D410, D415, D500, D600, D900, E100, E105, E300, E315, E316, E317, E330, E335, E350, E400, E500, E600, E610, E630, E700, E710, E715, E760, E800, E850, N400, N500, N600, N620, N625, P100, P107, P207, P400, P510, P710, P730, Q100, Q200, Q300, R200, R225, R225M, S100, S200, S300, S300m, S307, S500, T100, T309, T500, T709, V200, V205, V206, X105, X400, X426, X427, X427M, X450, X460, X475, X480, X507, X600, X640, X660, X680 **SPH** : A560, A580, A600, A620, A660, A680, A700, A740, A760, A790, A800, A860, A940
Autres: E800, E810, E820, PMA-740, PM-840, R200, R210, RLA760, V4400, VGA1000, VM-A680, VI660, X426, Z105

Sony Ericson® (2 broches larges)

C702, C902, C905, D750i, F305, G502, G700, G900, J100i, J110i, J120i, J220i, J230i, K200i, K220i, K310i, K320i, K330, K510i, K530i, K550i, K550im, K610i, K610im, K618i, K630i, K660i, K750i, K750, K770i, K800i, K810i, K850i, M600i, P1i, P990i, R300, R306, S302, S500i, T250i, T303, T650i, V630i, V640i, W200, W280i, W300i, W302, W350i, W380i, W550i, W580i, W595, W610i, W660i, W700i, W710i, W760i, W800i, W810i, W850i, W880i, W890i, W900i, W902, W910i, W950i, W960i, W980, Z250i, Z310i, Z320i, Z520i, Z530i, Z550i, Z555i, Z610i, Z710i, Z750i, Z770i, Z780i

Sony Ericson®

A2618s, a2618, A2618sc, A2628, A2638, A3618, F500i, J200i, J210i, J300i, K30i, K500i, K508i, K600i, K608i, K700, K700i, P800, P802, P900, P910, P9100, P910i, R190, R280D, R300, R300LX, R310s, R320, R320s, R380, R380e, R380s, R520, R600, S700i, S710a T20e, T100, T102, T105, T106, T200, T206, T226, T230, T237, T290i, T300, T306, T310, T312, T316, T39, T600, T601, T60D, T610, T616, T61c, T61d, T61LX, T61z, T62u, T620, T630, T637, T68i, V600i, V800, Z1010, Z200, Z300i, Z500, Z500a, Z600, Z800i, Z1010
A2218, A2218z, T28, T39m, T60c, T60d, T61c, T62u, T65, T66, T68, R300d, R3001x, R300z, R380

Nokia® (connecteur fin type N)

1200, 1208, 1650, 1680 Classic, 2600 Classic, 2630, 2660, 2680 Slide, 2760, 3109 Classic, 3110 Classic, 3110 Evolve, 3120 Classic, 3250, 3500 Classic (old type), 3600 Slide, 5000, 5070, 5200, 5220, 5300 XpressMusic, 5310 XpressMusic, 5320, 5610, 5500 Sport, 5700 XpressMusic, 5800 Music, 6070, 6080, 6085, 6086, 6101, 6102, 6103, 6104, 6102i, 6110 Navigator, 6111, 6112, 6120 Classic, 6120c, 6121 Classic, 6124 Classic, 6125, 6131, 6131 NFC, 6133, 6133b, 6136, 6151, 6170, 6210 Navigator, 6212 Classic, 6220 Classic, 6280 Navigator, 6233, 6234, 6267, 6270, 6280, 6288, 6290, 6300, 6300i, 6301, 6500 slide, 6555, 6600 Fold, 6600 Slide, 6650 Flip, 7070 Prism, 7210 Supernova, 7310 Supernova, 7360, 7370, 7373, 7390, 7500 Prism, 7510 Supernova, 7610 Supernova, E50, E51, E61, E61i, E65, E66, E71, E90, N70, N71, N72n N73, N76, N77, N78, N80, N81, N81, 8GB,

N810, N82, N90, N91, N91 8GB, N92, N93, N93i, N95, N95 8GB, N96

Motorola®

T- : T280i, T300p, T720, T720g, T720i, T721, T722i, T725, T730, T730c, T731c V- : V60, V60c, V60ci, V60g, V60i, V60ic, V60p, V60q, V60s, V60t, V60x, V65p, V66, V66i, V70, V80, V120c, V120e, V120t, V120x, V200, V260, V262, V265, V276, V300, V303, V400, V400p, V500, V505, V525, V535, V540, V545, V547, V550, V551, V557, V600, V620, V635, V710, V810, V957, V980, V1000, V1050 i30sx, i35s, i50sx, i55sr, i58, i58sr, i60c, i80s, i85s, i88s, i90c, i90cl, i95c, i95cl, i99cl, 120, 120e, 120t, 120x, 270c, 280 Autres: A630, A830, A835, A840, A920, A925, A1000, E310, E550, E398, E815, E1000, MPX220, MPX300, P280, ROKR E1

Siemens®

A50, A,51, A52, A55, A56, A56i, A56Plus, A57, A60, A62, A65, A70, A75, AX72, AX75, C55, C56, C60, C61, C62, C65, C65i, C66, C70, C72, C75, CC75, CF62, CF62T, CF63, CF75, CF110, CFX65, CL75, CT56, CT66, CX65, CX70, CX75, CX70E, CXT70, M35, M55, M56, M65, M75, MC60, MC65, MC75, ME75, S40, S55, S56, S65, S66, S75, SF65, SG75, SXG75, SK65, SL55, SL56, SL57, SL65, SP65, SX1, X65, Xelebri1, Xelebri2,

Mini USB

Blackberry 5820, 6210, 6230, 6280, 6220, 6510, 6710, 6720, 7100g, 7100i, 7100r, 7100v, 7100x, 7105t, 7130c, 7130e, 7130g, 7130v, 7210, 7230, 7280, 7250, 7270, 7290, 7510, 7520, 7730, 7750, 7780, 8700, 8700c, 8700g, 8700r, 8700f, 8700v, 8707v, 8703e, 8800, 8830, Curve 8300, Pearl 8100, Motorola : RAZR V3, RAZR V3c, RAZR V3i, RAZR V3x, L2, L6, L6 imode, L7, KRZR, PEBL, RIZR Z3, SLVR, A780, E770v, V235, V360, SLVR V8 T-Mobile : MDA, MDA Compact II, MDA Pro, MDA Vario, SDA, SDA Music Orange : SPV C500, SPV C550, SPV M500, SPV C600, SPV M600, SPV M3000 Qtek : 8010, 8020, 9000, 9100, S100, S110, S200 XDA : XDA Exec, XDA Mini Pro, XDA Mini S, XSA SP, Xphone II, Xphone lim I-mate JasJam, K-JAM, T-Mobile, MDA Vario Nextel ic402, ic502, ic902, O2 XDA Exec, XDA Graphite, XDA IQ, XDA mini s, XDA Orbit, XDA Stealth, XDA Trion, XDA Zink Nouveau Tom Toms, Nouveau Sony PSP ...